

To turn on the NTP servers in your storage receivers, do the following:

1. Using a web GUI, login to your ProAudio 4104 and go to Configuration - Date&Time.
2. Select “edit” from the left navigation bar.
3. Click the NTP: ‘Enabled’ radio button at the bottom of the page.
4. Click ‘send update’, which should bring you back to the time&date screen.

The NTP Field should now show Enabled

5. NTP server information should now be available from either network port on the 4104. Use the IP address of the port when setting up other devices to use the SFX4104 as a timing source.

NPR

PRSS – Network Support Center

202.513.2650