


**Standard Series (2 - 10 Meters)  
Quick Reference Sheet - Primary Guying Only**




Stand the tripod up with the base plates on the ground and release the Velcro Strap.

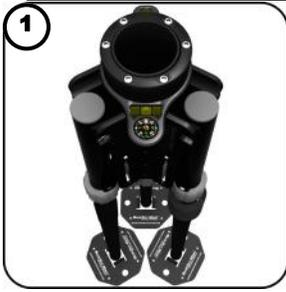


Unfold the tripod legs and make sure the cross bars are locked into position.




Loosen turn knobs on each of the tripod legs and allow them to fully extend.

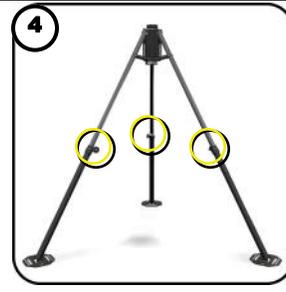

Make sure the base plates are flat on the ground and tighten all three turn knobs.

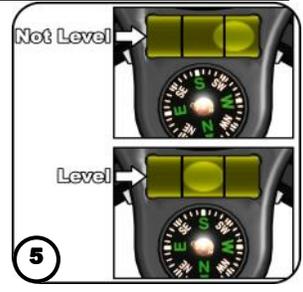


Level the tripod by using the two bubbles levels and adjusting the tripod legs.

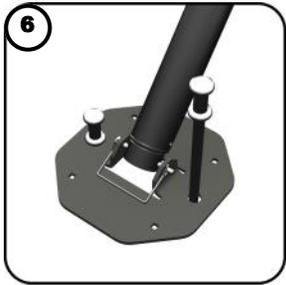

Secure the tripod by driving stakes through the two holes on each of the base plates.



Release the cam lock on the bottom of the tripod.

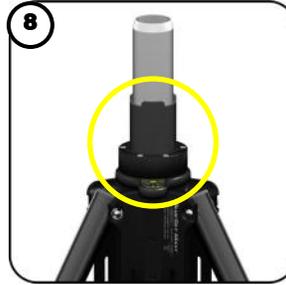

Insert first center mast pole leaving at least 4 inches above the tripod collar.



Lock the cam lock.




Add the mounting pole. The mounting pole is 1/2 the size of a mast pole.




Add the red primary guy ring and pin it to the bottom hole on the mounting pole.



Attach and secure your devices to the mounting pole. Use velcro straps to secure cables.

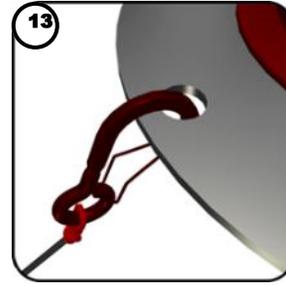

Attach the 1st primary guy rope to the round hole on the red primary guy ring.

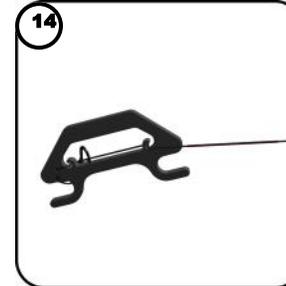


Start at the center of the tripod and unwind the guy rope while walking away from the mast.



Take one **NORMAL** step for each meter of height of the mast. 10 Meters = 10 **NORMAL** Steps.



Stop - unwind all guy rope, drive a stake into the ground and clip the guy rope to the stake.

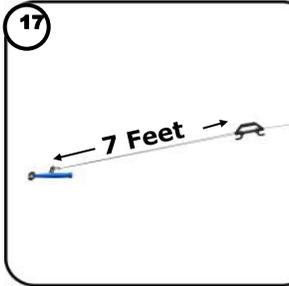

For mast heights 8 - 10 meters, slide the handle towards the mast approx. 7 feet. This will take up the slack in the guy rope during deployment and prepare you for incremental guying (if required). Shorter mast heights do not require this. Repeat these steps until all 4 primary guy ropes have been deployed 90 Degrees from each other.

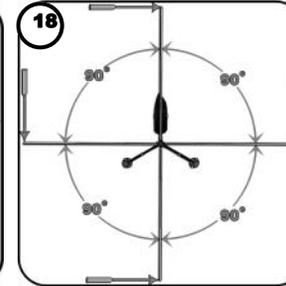


Diagram showing 90 degree angles between the four primary guy ropes.



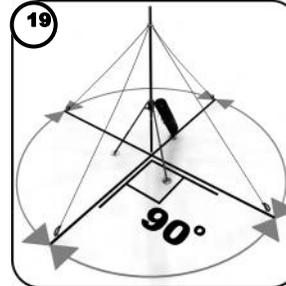


Diagram showing 90 degree angles between the four primary guy ropes.

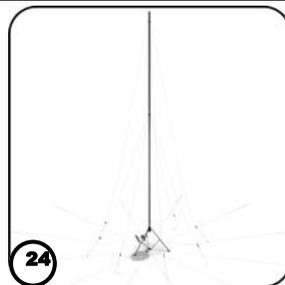

Holding the center mast pole, slowly release the cam lock.

**Standard Series (2 - 10 Meters)  
Quick Reference Sheet - Primary Guying Only**

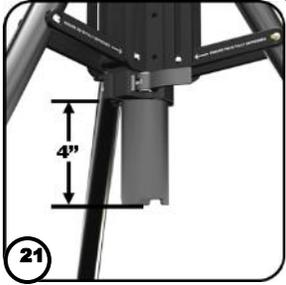





21 Raise the center mast pole until 4 inches are showing below the cam lock.

22 Lock the cam lock.

23 Insert another center mast pole, release the cam lock and raise the mast.

24 Repeat this process until desired height is reached. Incremental guying may be required.

**WARNING:** If at any point the mast begins to slip while the cam lock is locked - **STOP**

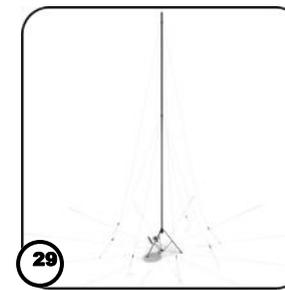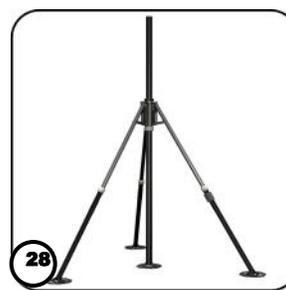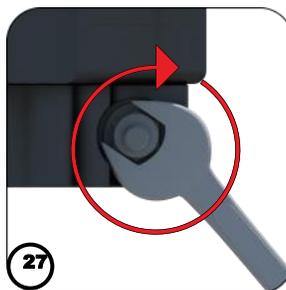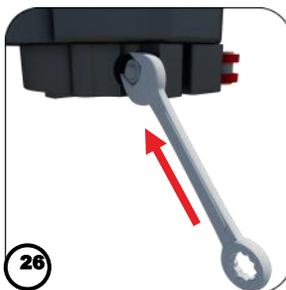




26 Use the 7/16 wrench provided with the system to make adjustments to the cam lock.

27 Tighten the nut on the cam lock a quarter turn until slipping no longer occurs.

28 Insert the base pole and lower the mast to the ground.

29 Adjusting the primary guy ropes and make sure the mast is straight and perpendicular.

30 Hold the guy rope in one hand and slide the guy handle back and forth to adjust.

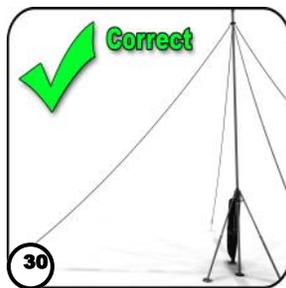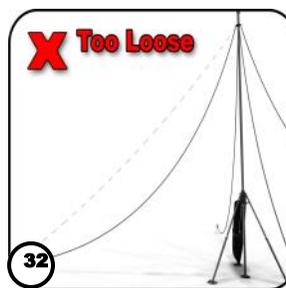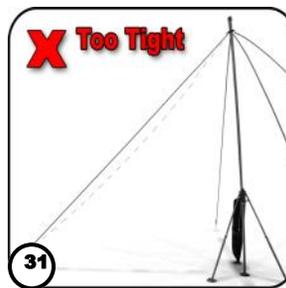


31 If the guy ropes are too loose it will allow the mast to lean. If the guy ropes are too tight then they will put unnecessary strain and load on the mast causing it to bend or bow. The tension should be firm, not slack nor taut.

32 Re-level the mast by simply tapping or nudging the base pole with your foot.

33 Drive two tripod stakes through the two holes in the base plate.

34 Lock the four primary guy ropes

35 Pull some slack in and loop the rope over the front horn on the guy handle.

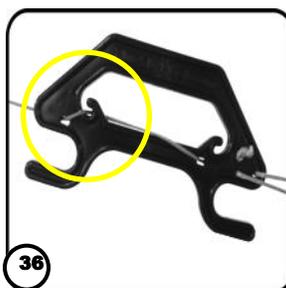

36 Lock the four primary guy ropes

37 Pull some slack in and loop the rope over the front horn on the guy handle.